

TASKI AERO 8 FLEXX WALLCHART

Preparation




1 Remove battery from charger and switch it off



2 Insert battery into battery compartment



3 Insert dust bag

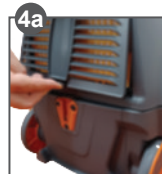

4a Assembly HEPA filter



Operation



5 Select nozzle type depending on surface



6 Adjust tube length



7 Switch on battery button



8 Select boost/eco mode



9 Turn off battery button



10 Release blockade (click) to remove battery



11 Place the battery on the charger.
Orange = charging
Green = fully charged
Red = fault



12 Remove upper part of machine body



13 Remove & empty dust bag



14 Wipe machine clean with a damp cloth



15 2 storage positions

Maintenance

ATTENTION!

Do not use the machine before you have read and understood the operating instructions!

Questions: 1-800-558-2332

