



TASKI® aquamat 10

1 Preparation

1



Display warning signs.

2




Check equipment, especially plug and cable. Report any fault or damage to a supervisor.

3




Thoroughly vacuum the carpet.

4

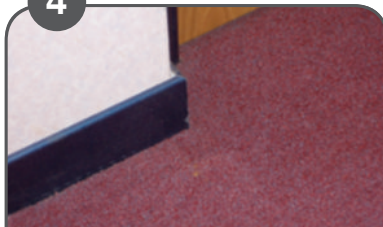

Check carpet is securely fastened.

5

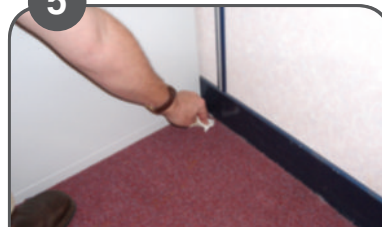

Check area is clear of furniture and objects. Check colour fastness of carpet.

6 Operation

6



Fill solution tank with clean water and appropriate detergent dilution. Ensure lid is fitted correctly.

7



Switch on power/vacuum switch.

8



Switch on water (trigger may need to be operated to release airlock and allow solution to spray.)

9



Holding the wand head flat to the floor, squeeze trigger to release solution.

10



Start moving backwards immediately, ensuring water is being recovered.

11




At end of pass release trigger and continue backwards for a few inches to recover last drops of water.

12




Heavily soiled carpets may require more than one pass.

13

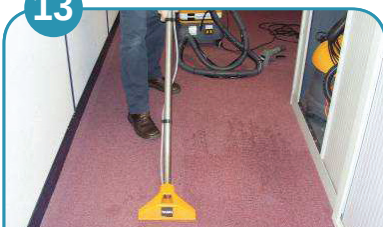

If necessary, pass over same path again without squeezing the trigger to ensure maximum water removal.

14

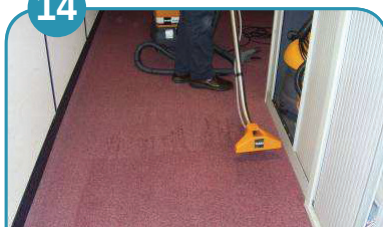

Work in overlapping passes to ensure carpet is cleaned thoroughly and evenly.

15



For stairs, edges, corners and upholstery replace wand with hard nozzle.

16 Maintenance

16



When recovery tank is full, cut out will operate. Sound of vacuum will become higher pitched.

17



Stop immediately and empty recovery tank. (Pull black release button to remove tank).

18



Switch off pump and operate trigger to release pressure.

19




Switch off vacuum and detach hoses ensuring no dirty water escapes from the extraction hose.

20




Empty recovery tank and clean (tank may be removed).

21

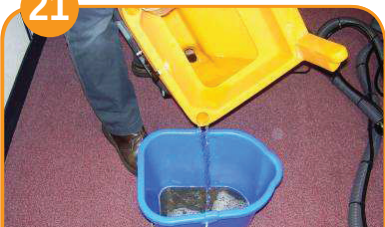


Empty solution tank and clear fluff and debris from wand.

22

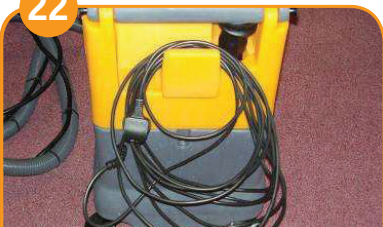

Wind cable back wiping clean with damp cloth and checking as you do.

23

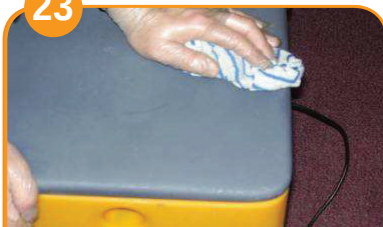

Wipe machine clean with damp cloth.

