



TASKI[®] ergodisc duo

1 Preparation

1



Display warning signs.

2



Check equipment, especially plug and cable. Report any fault or damage to a supervisor. Label as faulty and do not use.

3



Tip machine back to put handle on floor and fit pad/pad drive or brush.

4



Do not plug in and switch on at socket until machine is ready for use.

5

If carpet cleaning, use appropriate shampoo solution depending on carpet skimming, bonnet mopping, wet or dry shampoo operation.

6



If carpet shampooing, remove additional weight from ergodisc duo and always prewet shampoo brush.

7



For wet scrubbing fill tank or mop cleaning solution on floor as appropriate.

8

Operation



Ensure speed control switch is in first position (low speed).

9




Lower handle to a comfortable position by squeezing lower lever.

10



To activate machine press in yellow button whilst squeezing upper lever.

11

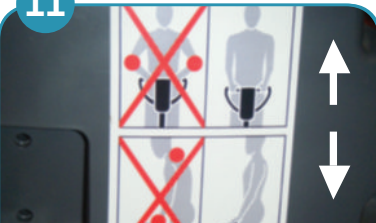

Raise handle for right. Lower handle for left.

12




Commence scrubbing at furthest point from plug socket. Work backward with cable behind you at all times.

13



Hold cable over handle, NOT over shoulder. Keep cable out of solution.

14

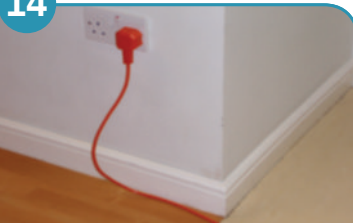

Keep cable flat on the floor, NOT taut.

15



Cut in edges to avoid corrugated effect.

16



Work from side to side with overlapping passes.

17



Put handle in upright position when not in use. Unplug if left unsupervised.

18



When changing socket, coil cable from machine to plug, not plug to machine, to avoid twisting.

19



Unplug.

20

Maintenance



If solution tank fitted, check valve – clean as required.

21



If foam generator fitted, empty and rinse thoroughly.

22



Wind cable back into handle, wiping clean with a damp cloth as you do.

23



Wipe machine clean with a damp cloth.

24



Do not store machine with pad fitted.

25



Remove pad/pad drive or brush. Wash and hang to dry.

