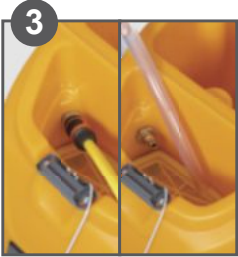


ULTIMAXX 900 with single disc drive

Preparation

- 

1 Unplug machine when batteries are fully charged
- 

2 Open lid of machine
- 

3 Fill tank with water
- 

4 Dose chemicals manually
- 

5 Or with using IntelliDose +
- 

6 Place the brush / pad drive
- 

7 Connect the hose to the squeegee
- 

8 Lower brush units by using the manual lever (by foot)

Operation

- 

9 And lower the squeegee
- 

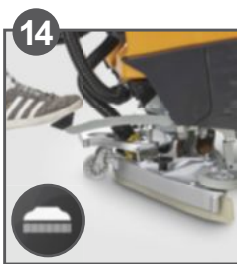
10 Adjust handle for perfect working position
- 

11 Start machine by pushing the key
- 

12 Start water, vacuum motor and choose water level

Maintenance

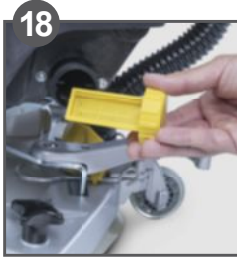
- 

13 Pull levers to start cleaning
- 

14 Lift brush unit
- 

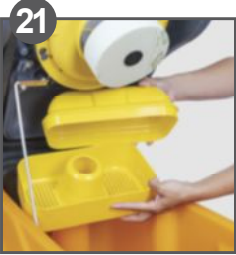
15 Lift squeegee
- 

16 Empty the tank
- 

17 Remove squeegee and rinse with water
- 

18 Check filter and rinse with water
- 

19 Remove brush / pad drive
- 

20 Remove filter
- 

21 Empty filter and rinse with water
- 

22 Check filter and rinse with water
- 

23 Store machine with open lid
- 

24 Plug machine in if needed

ATTENTION!

Do not use the machine before you have read and understood the operating instructions!
Questions: 1-800-558-2332