

Assembly Instructions

HYGINITY Sensor Clean&Care Dispenser 500


Item No.: **333432 / 333433**

HYGINITY Sensor Clean&Care Spender 500
HYGINITY Sensor Clean&Care dispenser 500
HYGINITY Distributeur clean&care Sensor 500 mL
HYGINITY Dozownik clean&care sensor 500


HYGINITY Sensor Clean&Care Dispenser 1,000

Item No.: **333436 / 333437**


HYGINITY Sensor Clean&Care Spender 1.000
HYGINITY Sensor Clean&Care dispenser 1.000
HYGINITY Distributeur clean&care Sensor 1.000 mL
HYGINITY Dozownik clean&care sensor 1.000

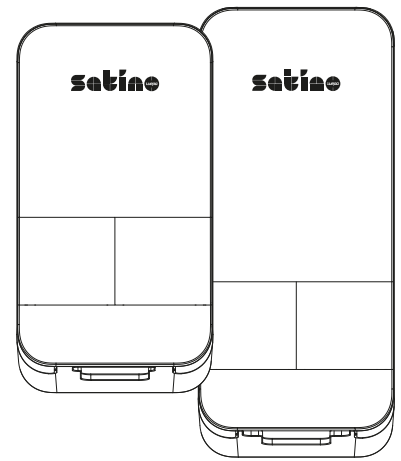


Supplied

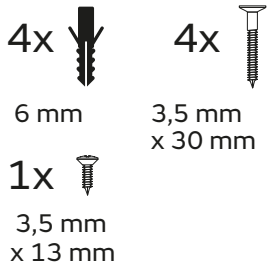


Needed tools

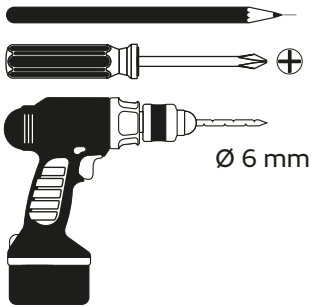

Mounting Plate


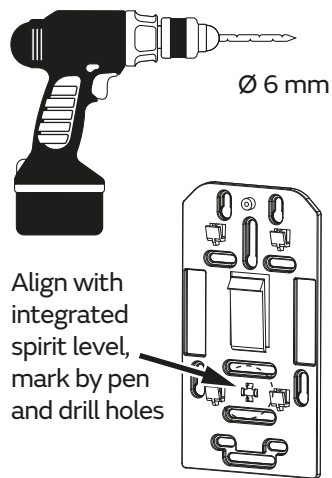


Preferred distance

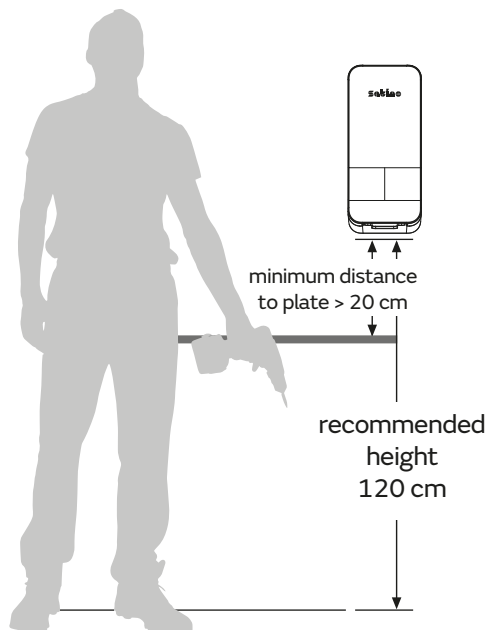


Attaching Dispenser to Mounting Plate

Optional: Use the single screw to attach the Dispenser securely to the Mounting Plate

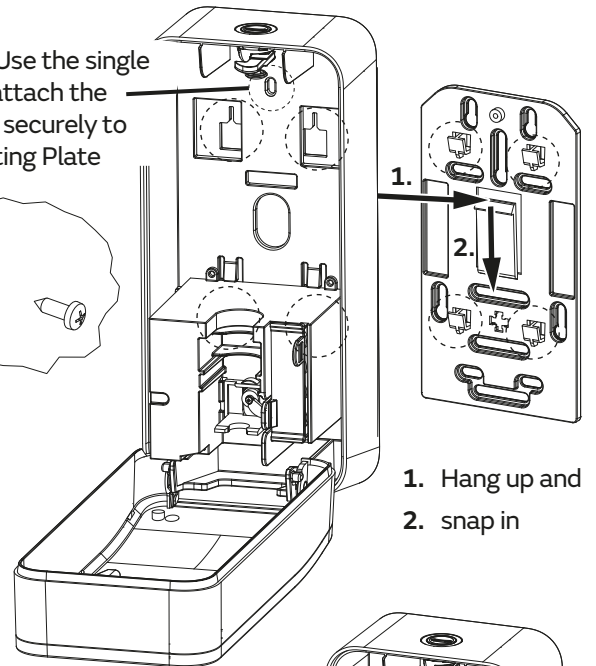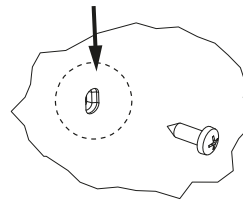

Removing Dispenser from Mounting Plate

1. Press the inner snap and then
2. lift the dispenser.

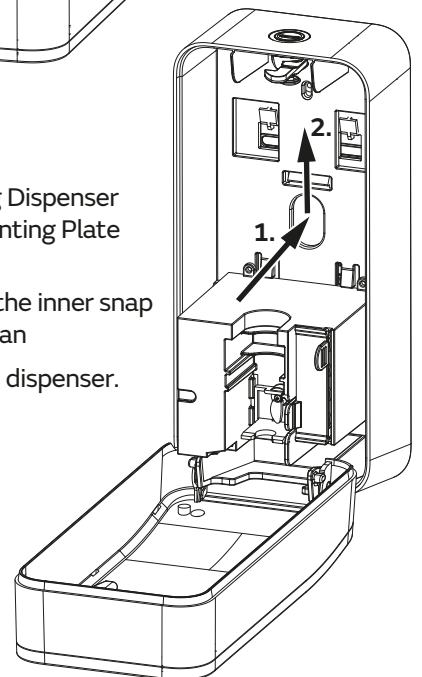

HYGINITY
Sensor Clean&Care
Dispenser 500

Item No.:
333432
333433

Suitable for
SF2

HYGINITY
Sensor Clean&Care
Dispenser 1,000

Item No.:
333436
333437

Suitable for
SF1

HYGINITY

Sensor Clean&Care Dispenser 500 and 1,000

Item No.: **333432 / 333433** and
Item No.: **333436 / 333437**

Key options

Removable key

To use the removable key,
the pin must be pulled out.

Pin outside

If you want to use the
permanent key, press the pin in
after you have inserted the key.

Permanent Key

Push Pin inwards

Exchange the bag and ensure the power supply

Please place **original** Satino liquid soap, foam soap, foam soap free, disinfection or toilet
seat cleaner (SF2 for the 500ml or SF1 for the 1,000ml version) in the dispenser.

☀ Operating state

- ▶ **Red light permanent:**
Battery charge insufficient
- ▶ **Red light flashing:**
Battery charge critical
- ▶ **Blue light:**
Cover open
- ▶ **White light:**
Dispenser active

Power supply

Optional: in USB-C mode

USB-C mode
5V / 2000 mA




USB-C cable (Item No.: 333399) and
USB-C adapter (Item No.: 333398)
are available in the spare parts shop


www.satino-spareparts.shop

Battery use

Only use type No.:
4x 1,5 V Type AA

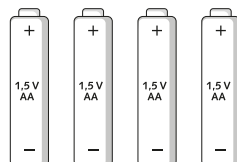

Open the
battery
compartment
and insert the
batteries.

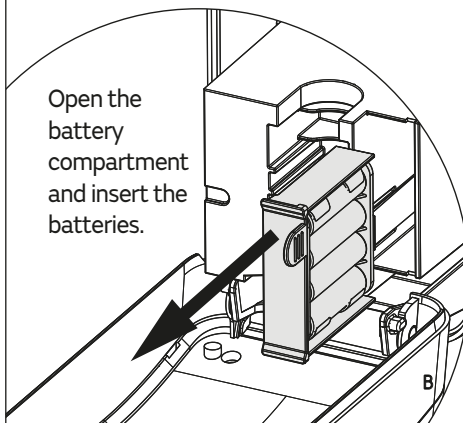

Plug in for
USB-C
on back of
dispenser

„CLICK“

