

Assembly Instructions

HYGINITY AutoCut Dispenser

Item No.: 333418 / 333419

HYGINITY AutoCut Spender

HYGINITY Handdoekrolspender AutoCut

HYGINITY Distributeur pour essuie-mains en rouleau

HYGINITY Dozownik AutoCut



Supplied



4x 6 mm




4x 3,5 mm
x 30 mm



1x 3,5 mm
x 13 mm



Needed tools

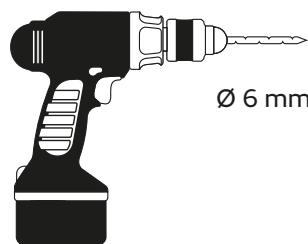


Ø 6 mm

Suitable for
SYS1


Mounting Plate

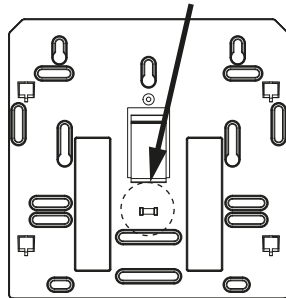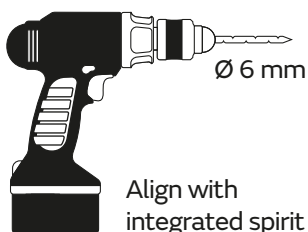


Attaching Dispenser to Mounting Plate

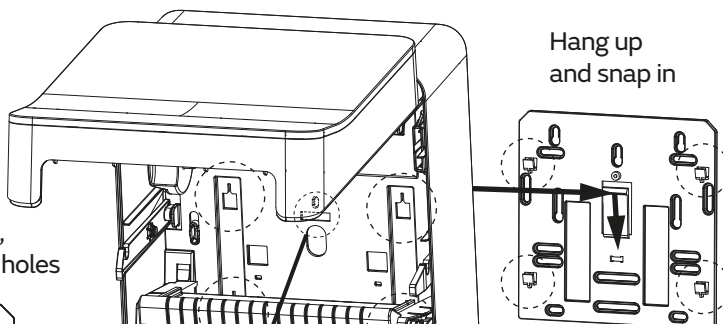

Optional: Use the single screw to attach the Dispenser securely to the Mounting Plate

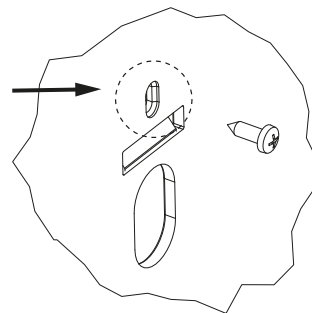


Preferred distance

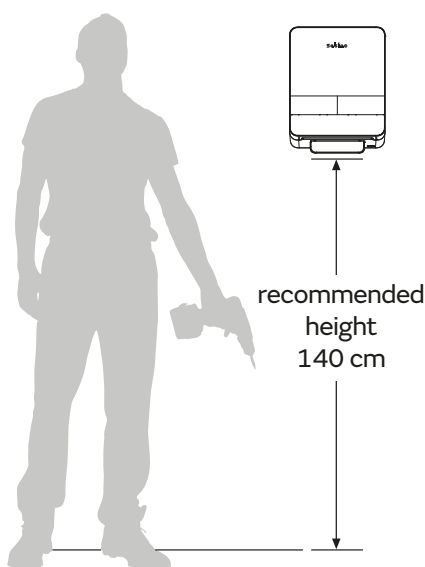

Removing Dispenser from Mounting Plate



1. Push
2. Lift

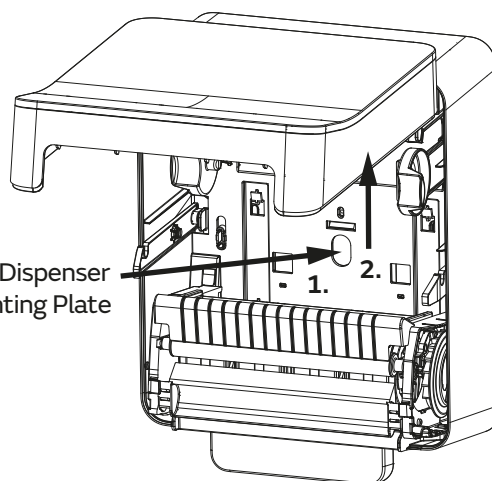

HYGINITY
AutoCut Dispenser


Item No.: **333418 / 333419**

Key options

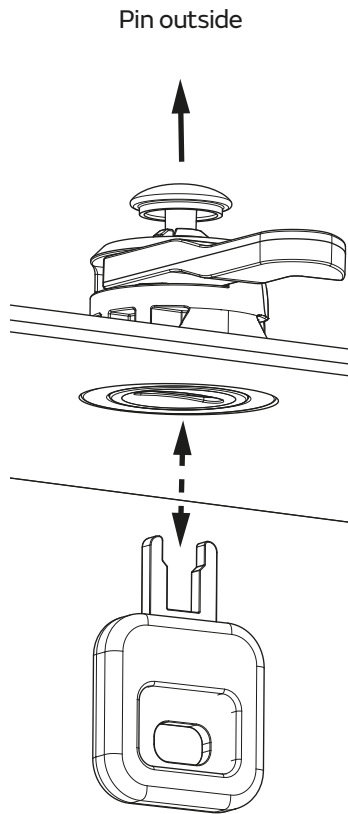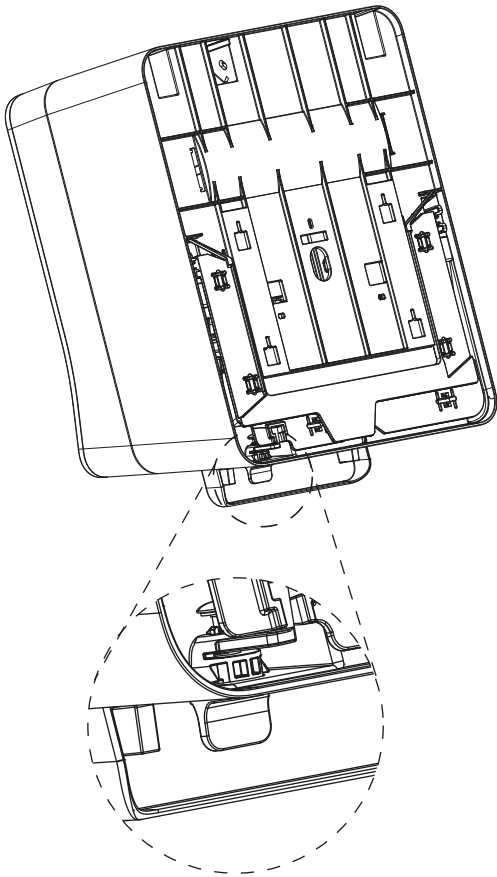

To use the removable key,
the pin must be pulled out.


Removable key

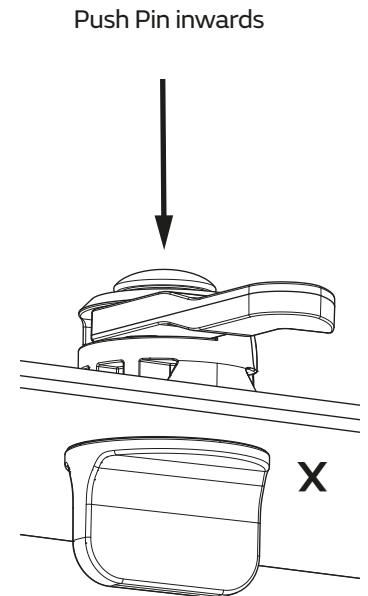


If you want to use the
permanent key, press the pin in
after you have inserted the key.

Permanent Key

Upgrade

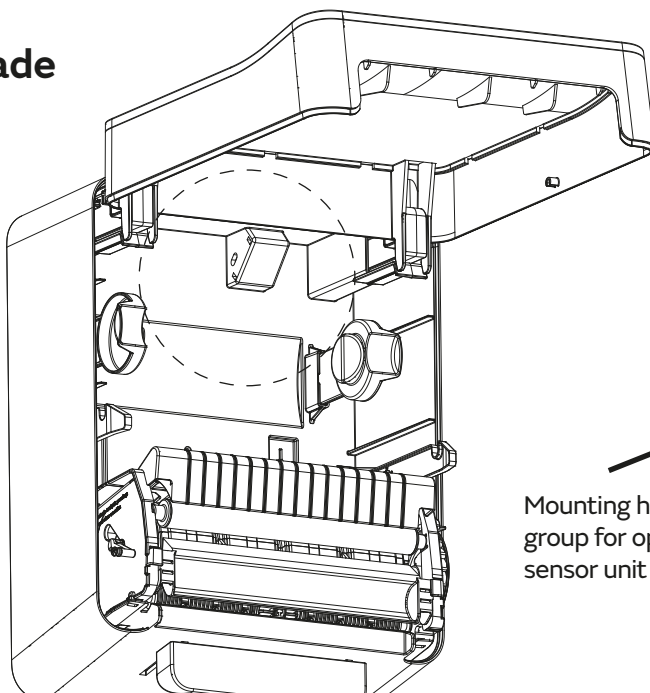

Mounting hole
group for optional
sensor unit

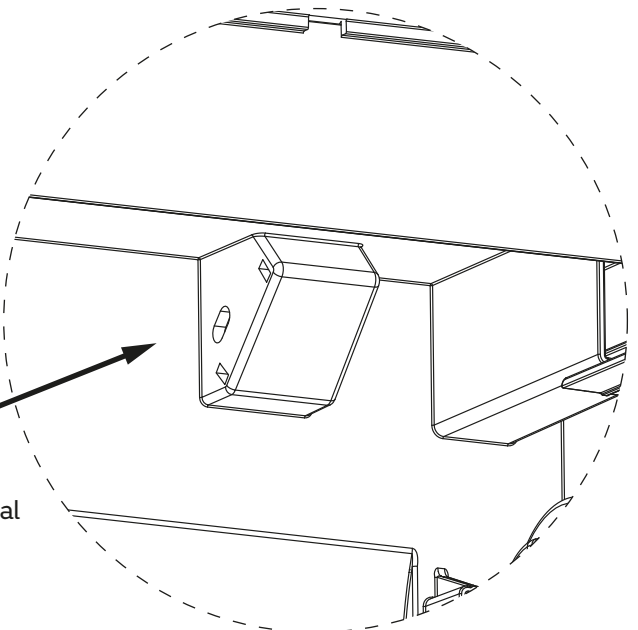


**HYGINITY
AutoCut Dispenser**

Item No.: **333418 / 333419**

Put Satino SYS1 paper towel roll between the lateral roll holders. - Mind the "adapter" here!

Operation

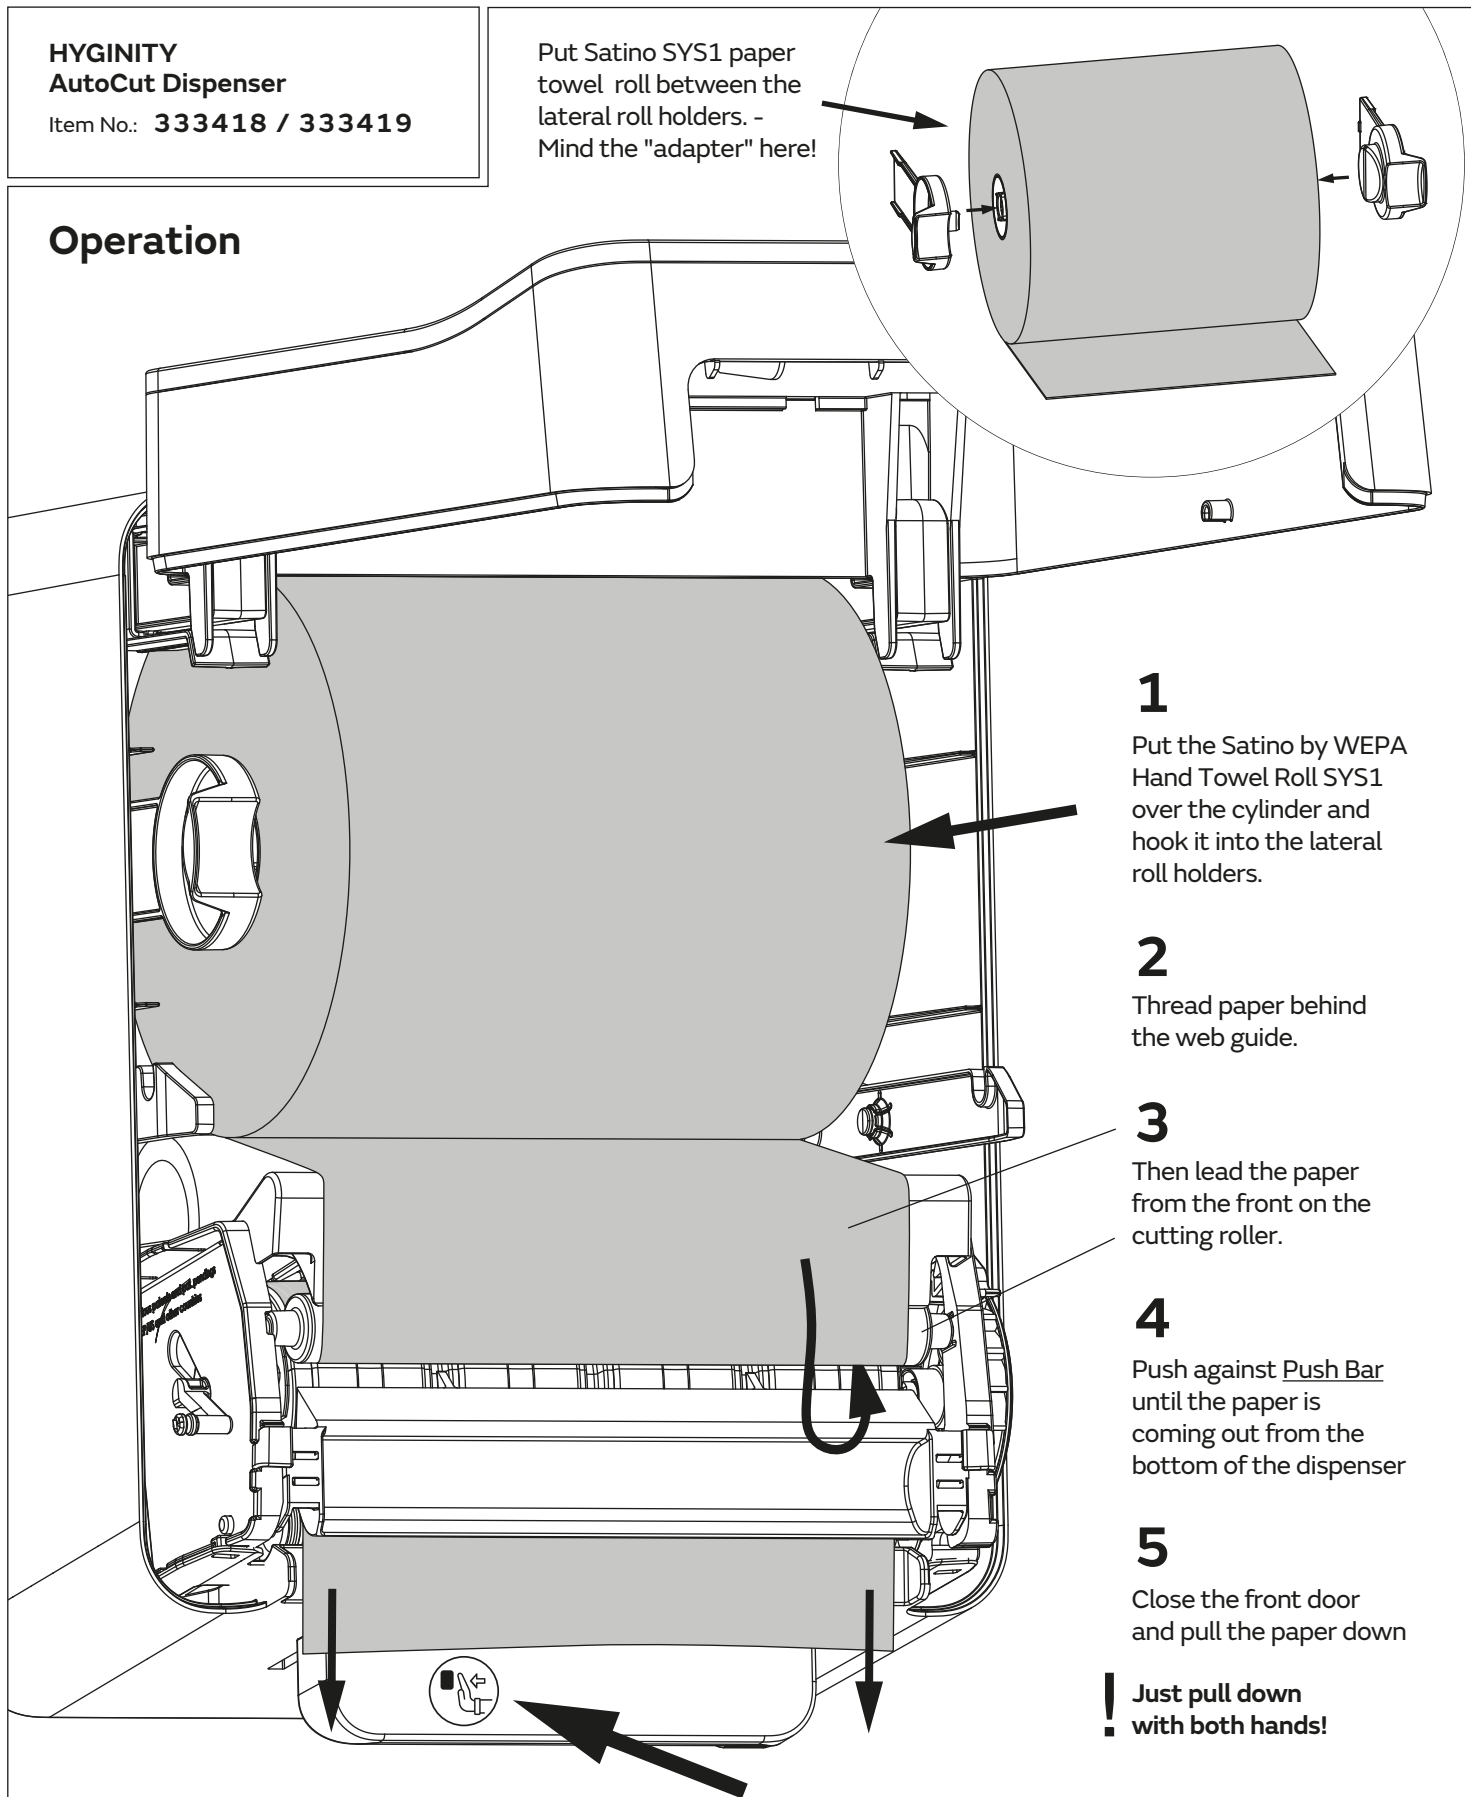

1

Put the Satino by WEPA Hand Towel Roll SYS1 over the cylinder and hook it into the lateral roll holders.

2

Thread paper behind the web guide.

3

Then lead the paper from the front on the cutting roller.

4

Push against Push Bar until the paper is coming out from the bottom of the dispenser

5


Close the front door and pull the paper down

! Just pull down
with both hands!

! No paper towel to see? – Push against the Push Bar

Optional Operation

If the roll has a diameter of 6cm or less, store it in the spare roll holder. This way you can insert a new/fresh roll to use alongside until the spare roll is fully used.



Optional Double feed of paper (by use of rest roll)

Please place the remaining roll in the designated compartment below. Then, insert the new roll as you did before, threading the paper between the rollers of the mechanism. Next, press the push bar. Both the towel and remaining rolls will now be used concurrently.

