

swingo® 755B BMS

Preparation



1 Unplug cable of battery charger, wind up and place on machine (holder).



2 Battery cut-off switch.



3 Fill solution tank with clean water.



4 Use TASKI IntelliDose (the TASKI onboard dilution system) OR dose cleaning product into dosing aid, then rinse it in the clean water in the solution tank.



5 Mount squeegee: position pockets of the squeegee exactly under the squeegee holder and push holder down.




6 Position tool(s) carefully under lifted brush unit.



7 Turn the machine on.




8 Lower brush unit with foot pedal.

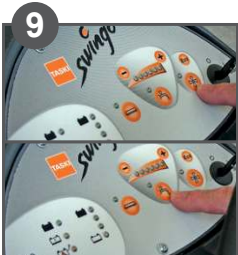

9 Start vacuum motor and solution supply (press orange buttons).



10 Adjust solution flow. (depending on model - with buttons on dashboard or with lever).

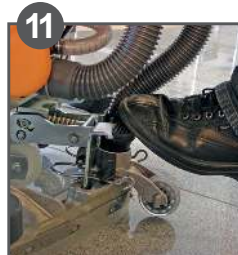

11 Lower squeegee with squeegee lever.



12 Clean the floor.



13 Turn the machine off.



14 Drain recovery tank and rinse with fresh water, then drain solution tank.



15 Remove the floating unit (filter and floater) with a rotation of the yellow filter in anticlockwise direction.



16 Clean the floating unit under running water.



17 Clean solution filter.




18 Remove tools, clean tools and allow to air dry.



19 Remove and clean squeegee.



20 Wipe machine with moist cloth.

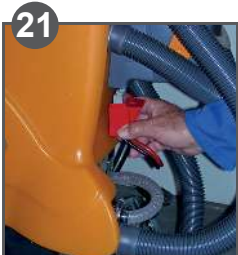

21 Battery cut-off switch.



22 Plug in cable of battery charger.



23 Flip dosing aid.



24 Store machine with partially open lid (lid rests on dosing aid) for ventilation.

ATTENTION!

Do not use the machine before you have read and understood the operating instructions!
Questions: 1-800-558-2332

